


# Casement Window Limited Ventilation Control Arm Installation Instructions




## ⚠ WARNING


• Do not install on windows intended for use as emergency exits. Limited Ventilation Control device will hinder escape or rescue in an emergency.

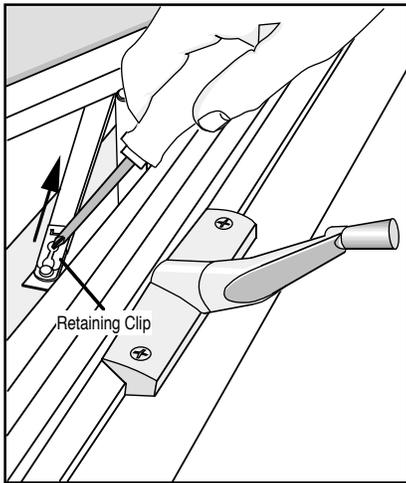


1. Open window to a 6" to 8" opening and slide the retaining clip away from the pivot pin.

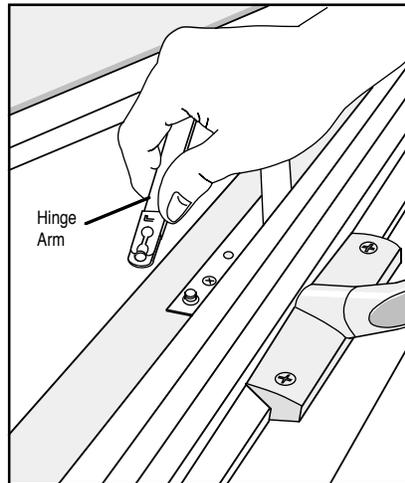


2. Remove the lower hinge arm from the hinge pivot pin.

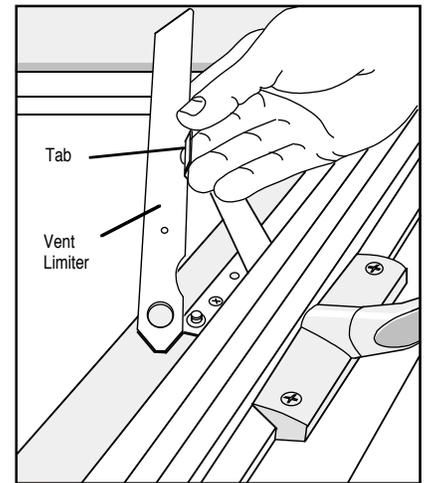


3. Locate vent limiter and position in opening so tab is pointing up and towards the inside of the window unit.

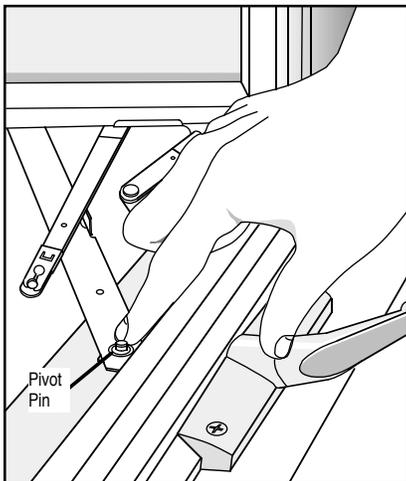

4. Place the vent limiter over the hinge pivot pin as shown.

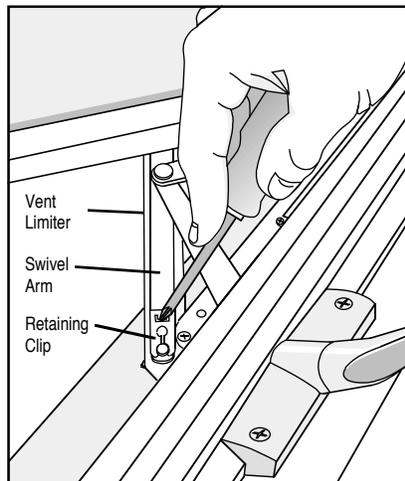

5. Align vent limiter with the swivel arm and replace the swivel arm on the pivot pin. Slide the retaining clip in position to secure the arm on the pivot pin.

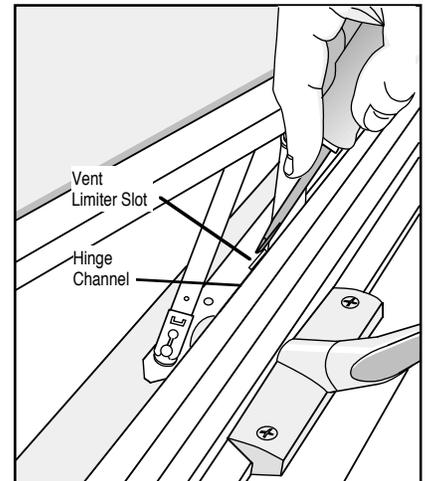


6. Using a screwdriver, apply an inward pressure against the vent limiter slot to swing and tuck the vent limiter against the hinge channel as the window is being closed.

The window will now only open to the limited vent position.


---

## Cleaning Mode for Casement Window Limited Ventilation Control Arm


---

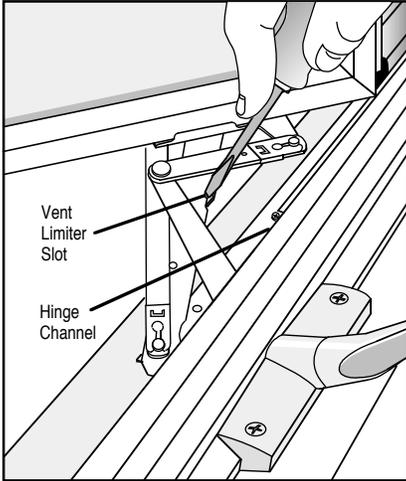

1. Open the window to the limited opening. Using a screwdriver, apply an outward pressure away from the operator on the vent limiter slot to swing the vent limiter outward or away from the hinge channel as the window is being closed to allow the vent control to by-pass the hinge shoe.

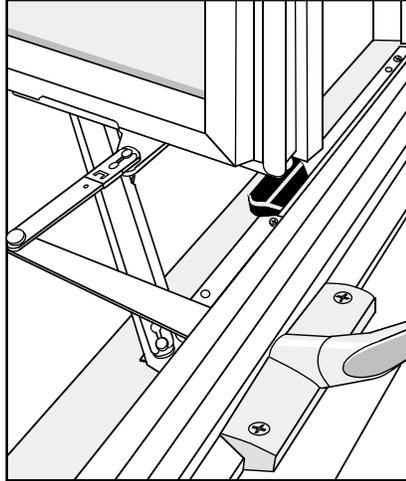

2. The window may now be opened to the cleaning mode with the hinge shoe traversing to the stopper screw.

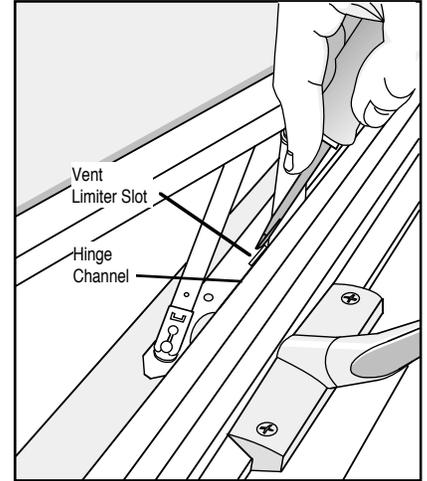

**To close to normal operation with limited opening,** close window to a 4" to 6" opening. Using a screwdriver, apply an inward pressure against the vent limiter slot to swing and tuck the vent limiter against the hinge channel as the window is being closed.

The window will now only open to the limited vent position.