Insect Screen Replacement

for Andersen® Frenchwood® Outswing Patio Door Retractable Insect Screen (Post-August, 2002)

Limited Publication Release



IMPORTANT

Read all instructions carefully before attempting this procedure. If you have any questions about your ability to complete this procedure, call Andersen at 1-888-888-7020 for further direction. Andersen WindowCare® service center hours are Monday through Friday, 7 a.m. to 7 p.m. Central Time and Saturday, 8 a.m. to 4 p.m. Central Time. Thank you for choosing Andersen® products.

Important Safety, Assembly, and Installation Information

Every assembly and installation is different (windloads, structural support, etc.), and Andersen strongly recommends consultation with an Andersen supplier or an experienced contractor, architect, or structural engineer prior to the assembly and installation of any Andersen product. Andersen has no responsibility in regard to the post-manufactured assembly and installation of Andersen products.

A WARNING

Use of ladders and/or scaffolding and working at elevated levels may be hazardous. Follow equipment manufacturer's instructions for safe operation. Use extreme caution when working around window and door openings. Falling from opening may result in personal injury or death.

A WARNING

Improper use of hand or power tools could result in personal injury and/or product damage. Follow equipment manufacturer's instructions for safe operation. Always wear safety glasses.

A WARNING


Weight of window and door unit(s) and accessories will vary. Use a reasonable number of people with sufficient strength to lift, carry, and install window and door unit(s) and accessories. Always use appropriate lifting techniques.

Parts Included

- (1) Instruction Guide
- (1) Insect Screen/Core
- (1) Pile Opener

Tools and Supplies

- Safety Glasses
- Phillips Screwdriver
- 3/8" Socket Drive

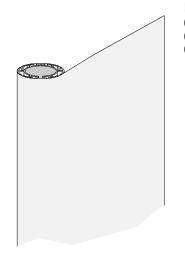


Insect Screen/ Core (2573120) 8'-0" (2573121) 6'-11" (2573122) 6'-8"




1. Remove Head Track

- Place *Pile Opener* in *Head Track* to locate #7x 1" *Screws*. Remove screws.
- Remove end of *Head Track* from *Side Track* and tab on *Canister End Cap*.

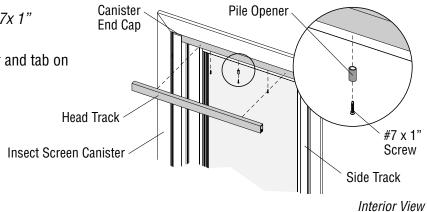


2. Remove Side Track

• Remove #7 x 1" Screws holding Side Track and #6 x 1" screw holding Latch Strike to remove Side Track.

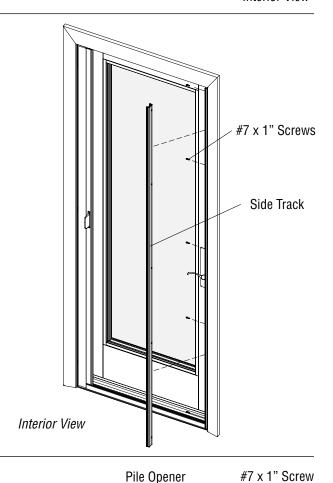


3. Remove Sill Track

- Place *Pile Opener* into *Sill Track* and slide along its length to locate and remove #7 x 1" Screws.
- · Remove Sill Track.

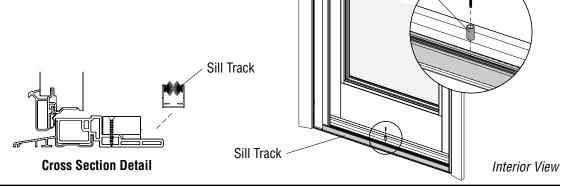

4. Remove Insect Screen Canister

 Remove Insect Screen Canister by prying outwards on interior lip of Attachment Clips, being careful not to damage surface.

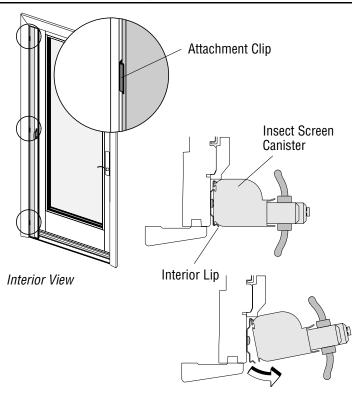

5. Remove Spring Tension Assembly


NOTICE

Orientation of Spring Tension Assembly will differ depending on the Insect Screen orientation.

A CAUTION


Spring is under tension. Use caution when removing Spring Tension Assembly.

- Position *Insect Screen Canister* as shown.
- Unlock Spring Tension Assembly from End Cap by turning Quick Release Spindle 1/4 turn clockwise using a 3/8" socket drive. Pull Spring Tension Assembly out far enough to clear End Cap.
- Unwind Spring Tension Assembly to release tension.
- Remove Spring Tension Assembly.
- Remove Insect Screen/Core from Insect Screen Canister.

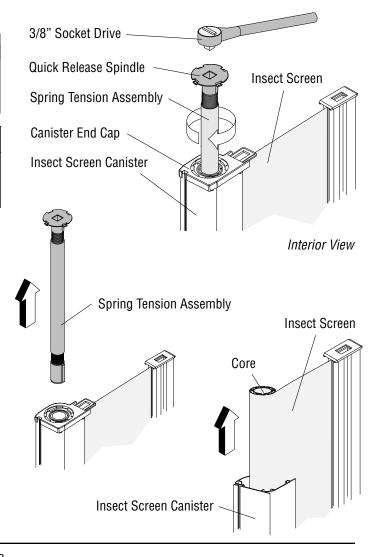

6. Remove and Reapply Insect Screen Slide Bar


- Remove End Guide, Exterior Handle, Spline and Insect Screen Cloth from Insect Screen Slide Bar.
- Align and overlap Insect Screen 1/4" onto Insect Screen Slide Bar.
- Roll Insect Screen Spline over Insect Screen and into spline kerf.

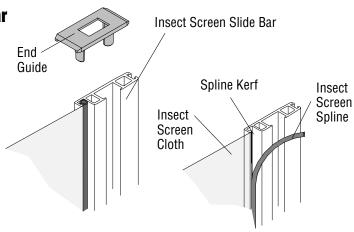

Interior View


7. Apply New Insect Screen

• Install new *Insect Screen/Core* into *Insect Screen Canister* in the same orientation as the old assembly.

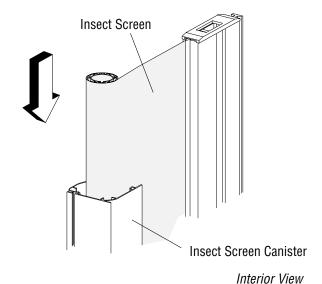

8. Insert Spring Tension Assembly

- Insert Spring Tension Assembly into Insect Screen Canister.
- Turn *Quick Release Spindle* clockwise fifteen times for double unit and ten times for a single unit.
- Secure Spring Tension Assembly to End Cap by turning Quick Release Spindle 1/4 turn counterclockwise.
- Check *Insect Screen* for proper operation. Pull *Insect Screen* out 2' to 4' and let it retract.
- If Insect Screen does not retract properly, remove Quick Release Spindle, turn two to four times, reinstall, and check operation again. Repeat as needed until Insect Screen retracts properly.

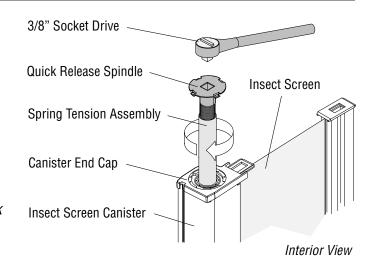

9. Reattach Insect Screen Tracks and Insect Screen Canister.

• Install *Insect Screen Tracks* and *Insect Screen Canister* reversing **Steps 1-4**.