

Rough Opening Preparation

for Andersen® Frenchwood® Outswing Patio Doors



INSTALLER: Please leave this guide with the building owner to file for future reference.

Congratulations! You have just purchased one of the many fine Andersen products. For ease of installation and continued enjoyment of your Andersen product, please read and follow this Instruction Guide completely. You may direct any questions about this or other products to your local Andersen dealer. Andersen dealers can be found in the Yellow Pages under Windows. Thank you for choosing Andersen.



Single Panel



Double Panel Jamb Hinged

SINGLE PANEL UNITS

Unit No.	2168	2768	2968	3168	21611	27611	29611	31611	2180	2780	2980	3180
Rough Opening Width	2'1"	2'7"	2'9"	3'1"	2'1"	2'7"	2'9"	3'1"	2'1"	2'7"	2'9"	3'1"
Height	6'8"	6'8"	6'8"	6'8"	6'11"	6'11"	6'11"	6'11"	8'0"	8'0"	8'0"	8'0"
Approximate Weight	100	105	115	125	110	115	125	135	125	135	150	160

DOUBLE PANEL UNITS

Unit No.	4168	5068	5468	6068	41611	50611	54611	60611	4180	5080	5480	6080
Rough Opening Width	4'1"	5'0"	5'4"	6'0"	4'1"	5'0"	5'4"	6'0"	4'1"	5'0"	5'4"	6'0"
Height	6'8"	6'8"	6'8"	6'8"	6'11"	6'11"	6'11"	6'11"	8'0"	8'0"	8'0"	8'0"
Approximate Weight	150	185	197	215	165	195	205	225	185	230	248	275

⚠ WARNING

Use of ladders and/or scaffolding and working at elevated levels may be hazardous. Follow equipment manufacturer's instructions for safe operation. Use extreme caution when working around window and door openings. Personal injury and/or falls could occur.

⚠ WARNING

Improper use of hand or power tools could result in personal injury and/or product damage. Follow equipment manufacturer's instructions for safe operation. Always wear safety glasses.

⚠ WARNING


Weight of window and door unit(s) and accessories will vary. Use a reasonable number of people with sufficient strength to lift, carry, and install window and door unit(s) and accessories. Always use appropriate lifting techniques.

NOTICE


Frenchwood Outswing Patio Door must be installed flush with the exterior.

CAUTION


Do not install unit directly on masonry surface. Place a full length wooden support between the unit Sill and masonry surface. Failure to do so may result in product damage.

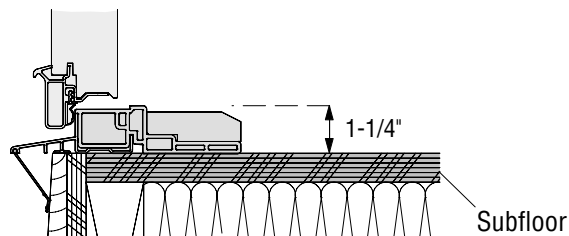**1. Prepare Rough Opening**

- Frame rough opening to dimensions from the table on page 1 according to unit size. Masonry rough opening must be 1/2" greater than unit width and height.
- Make sure *Sill Plate* is level by checking with a level. Shim *Sill Plate* to level.
- Make sure rough opening is plumb by checking with a level.
- Check squareness and dimension of rough opening by placing tape measure diagonally across, upper left to lower right and upper right to lower left corner. If measurements are the same, opening is square.
- Proceed with the Frenchwood Outswing Patio Door Installation Guide for instructions on installation of unit.

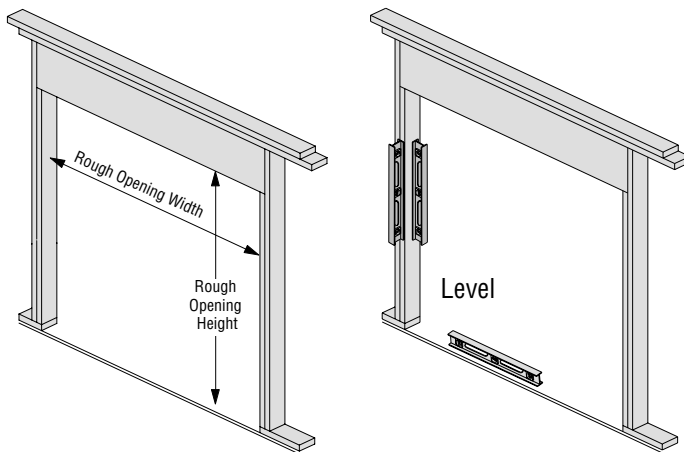

Standard Wood Frame Construction

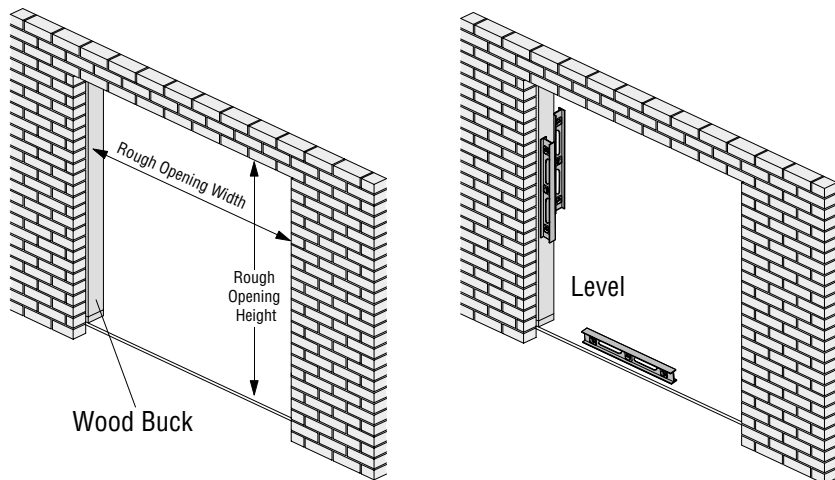

Masonry/Brick Veneer Construction