

Leaf Weatherstrip Replacement

for Andersen® 400 Series Casement and Awning Windows

Thank you for choosing Andersen.

For questions call 1-888-888-7020. For more information and/or guides visit andersenwindows.com.

Please leave this guide with building owner.

- **Read guide from beginning to end before starting installation. Read all warnings and cautions during unit installation.**
- **Check with your local building code official to identify and confirm compliance with local building code requirements.**

Parts Included

- (1) Instruction Guide
- (1) Leaf Weatherstrip

Tools Needed

- Safety Glasses



Leaf Weatherstrip



WARNING

Windows and doors can be heavy. Use safe lifting techniques and a reasonable number of people with enough strength to lift, carry, and install window and door products. Heavier windows and doors will require mechanical assistance. Failure to do so could result in injury, product or property damage.



WARNING

Use caution when working at elevated heights and around window and door openings. Follow the manufacturers' instructions for ladders and scaffolding. Failure to do so could result in injury or death.



WARNING



Follow manufacturers' instructions for hand and power tools. Always wear safety glasses. Failure to do so could result in injury, product or property damage.

1. Remove Sash

- Refer to *Sash Replacement Guide* for sash removal.

2. Remove Existing Weatherstrip


- Pull existing weatherstrip out of kerf in awning or casement sash.
- Properly dispose of weatherstrip.

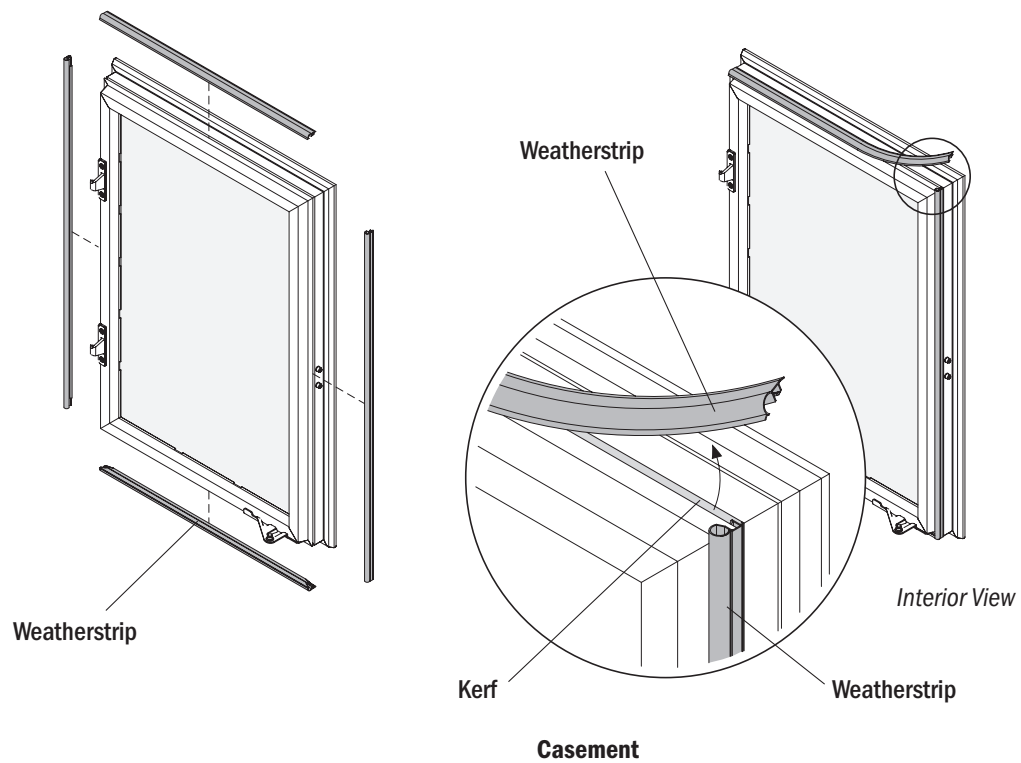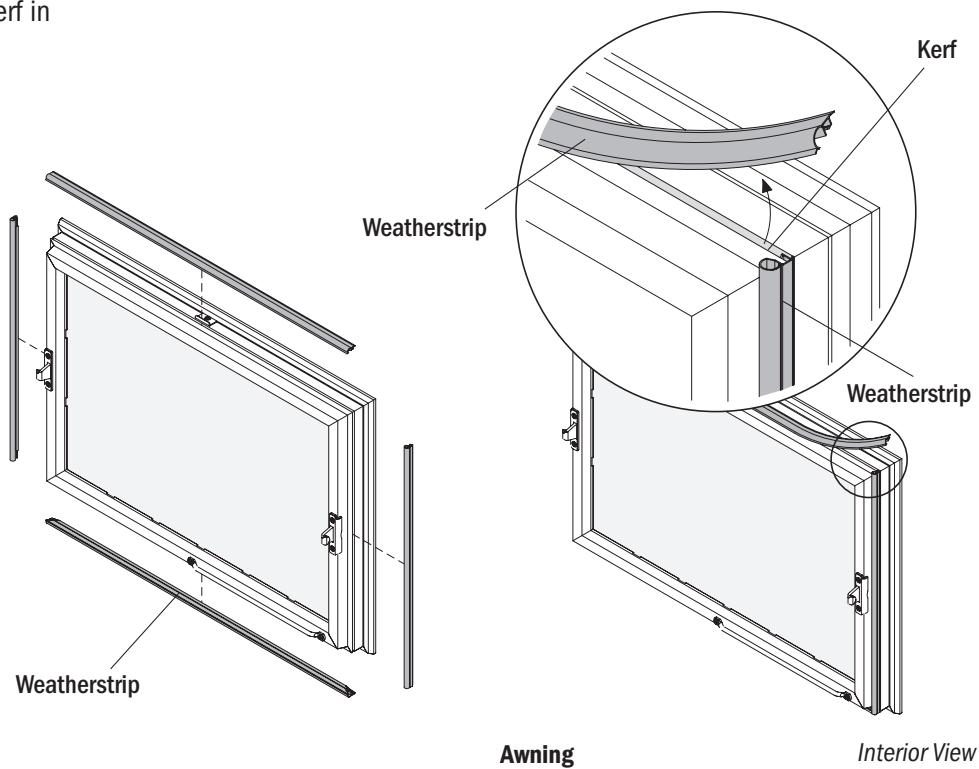

3. Install Leaf Weatherstrip


AWNING

- Position first notch of leaf weatherstrip at upper left corner of sash (as viewed from the interior).
- Push stem of leaf weatherstrip into kerf on top rail of sash until seated.
- Continue installation of leaf weatherstrip around perimeter of sash. Make sure notches are positioned at each corner.
- Trim the end of the leaf weatherstrip to length as needed so the weatherstrip ends are touching but do not overlap when fully installed.

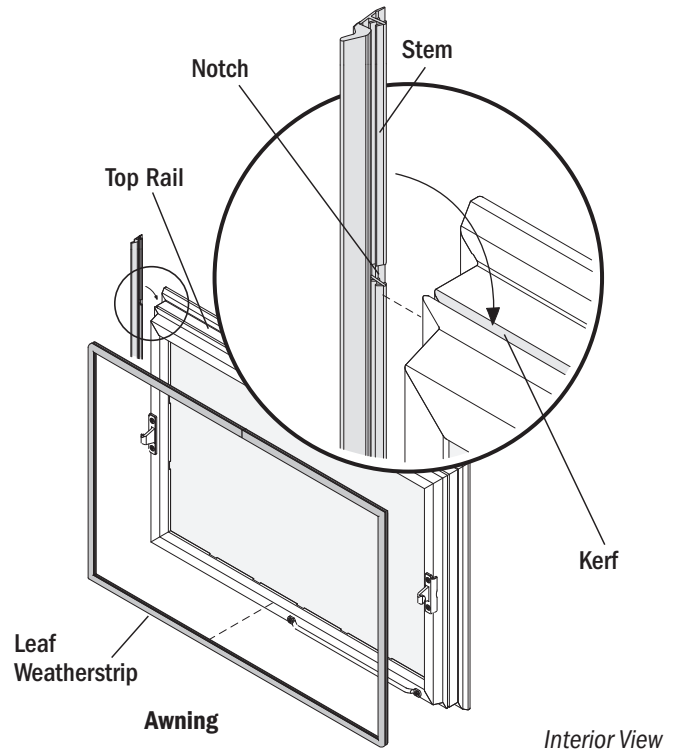

CASEMENT

- Position first notch of leaf weatherstrip at bottom corner of hinge side of sash.
- Push stem of leaf weatherstrip into kerf on hinge stile of sash until seated.
- Continue installation of leaf weatherstrip around perimeter of sash. Make sure notches are positioned at each corner.
- Trim the end of the leaf weatherstrip to length as needed so the weatherstrip ends are touching but do not overlap when fully installed.

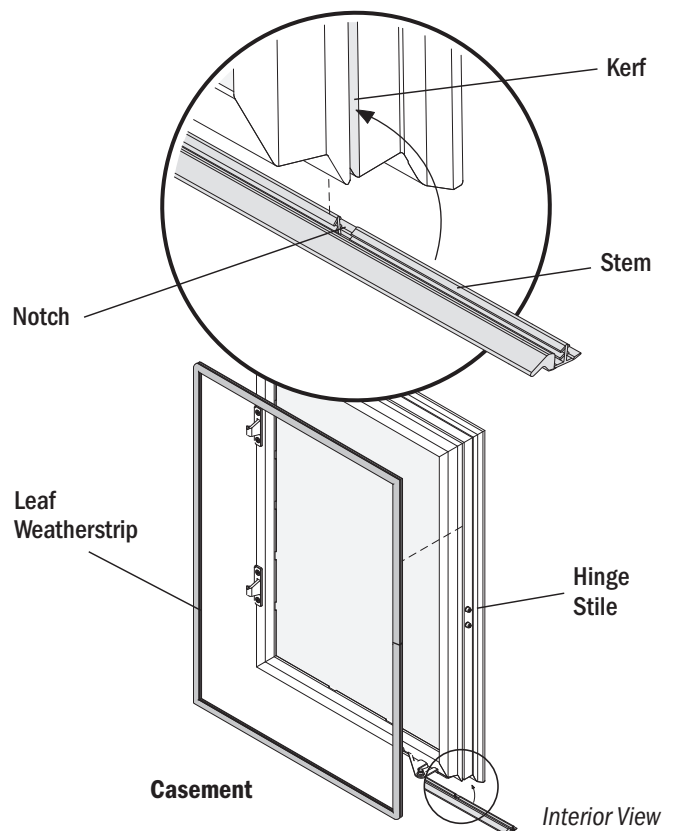

4. Install Sash

- Refer to *Sash Replacement Guide* for sash installation.
- Procedure is complete.
El procedimiento se ha completado.