Stool or Sill Extension Jamb Application To:




DH - Picture Window - DH Window Combinations

A. Optional Narroline Stool Application Narroline Stool For: Picture Window with Narroline Flankers Unit Description | Part Number Dim "A" Dim "A" 125-15/16" 20-58-20 1613848 20-50-20 1613846 117-15/16" 18-58-18 20-44-20 1613844 109-15/16" 18-50-18 1613842 18-44-18 101-15/16"

1. Locate the center of the stool using dimension "A". Measure 1/2 of the center unit dimension, on both sides of stool center, and remove stool tongue.

Stool Center

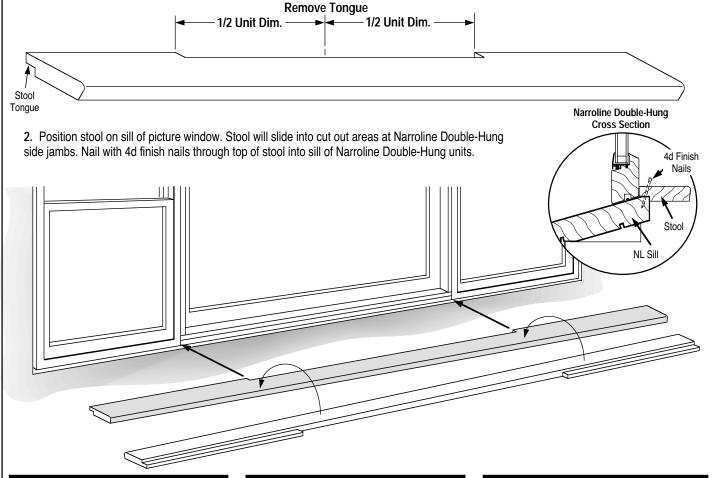

A WARNING

 Improper use of hand or power tools could result in personal injury and/or product damage. Follow equipment manufacturer's instructions for safe operation. Always wear safety glasses.

A WARNING

 Use of ladders and/or scaffolding and working at elevated levels may be hazardous. Follow equipment manufacturer's instructions for safe operation.

A WARNING

 Weight of window and door unit(s) and accessories will vary. Use a reasonable number of people with sufficient strength to lift, carry and install window or door unit(s) and accessories. Always use appropriate lifting techniques when lifting.

B. Optional Tilt-Wash Extension Jamb Application


1. Cut the Tilt-Wash extension jamb to length:


Narroline Double-Hung unit dimension +

Picture window unit dimension +

Narroline Double-Hung unit dimension.

2. Locate the center of the Tilt-Wash extension jamb. Measure 1/2 the center unit dimension, on both sides of Tilt-Wash extension jamb center, and remove the outside portion of the extension jamb tongue.

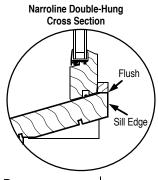



3. Check that all staples are recessed in sill stop so extension jamb will sit properly. Position extension jamb tongue in the picture window sill stop and fasten with 4d finishing nails. Attach extension jamb to Narroline units with 4d finish nails.

